Target setup for iMX6 Integrity Setup

This document describes the setup required to build and run CGI Studio applications with iMX6 device package on Freescale iMX6 hardware, as well as on Linux PCs.

Instructions are provided how to setup the system.
On iMX6 hardware this means how to update with the required BSP and Graphics Driver.
On Linux PCs this means how to install needed libs, headers and graphics drivers.
Next, it is explained how to run the iMX6 target demo application part of the release package.
Finally, the document provides instructions how to setup the build environment and how to build own applications for iMX6 target (Freescale iMX6 or Linux PC).

Shader Compiler Plugin
In SceneComposer there is a Shader Compiler Plugin available. Please refer to iMX6 Shader Compiler for more information.

- iMX6 Integrity
  - iMX6 Integrity Prerequisites
  - Running the Player Demo Application on iMX6 Integrity
  - Building Own Application for iMX6 Integrity
- iMX6 Prerequisites
- iMX6 Various Device Specific Content
  - iMX6 Specific Best Practices
  - Candera Device Packages
  - FeatStd Overview
  - Compile Shaders
  - Render Targets

iMX6 Integrity

iMX6 Integrity Prerequisites

Hardware: NXP iMX6 SABRE Automotive

CGI Studio has been tested on NXP iMX6 DualPlus SABRE Automotive Infotainment Board (Sabre AI).

CMake

In order to build Candera, the Meta build system CMake needs to be installed with at least version mentioned here.
CMake is able to create the cross compilation make files that can be used with Green Hills MULTI compiler.

MinGW

To allow cross compilation with makefiles, MinGW 5.1.6 was used for this release.

Green Hills Toolchain

The build tool chain is not part of the delivery. Green Hills MULTI compiler, Green Hills Integrity and the according iMX6 Sabre BSP patch have to be obtained directly from Green Hills and installed according to their installation guide.

CGI Studio was tested with **MULTI IDE 6.1.6, Compiler 2014.1.6** with **compiler patch 9431** and **INTEGRITY for ARM v11.0.4** including iMX6 SABRE Automotive BSP and Vivante Graphics Stack **Vivante_GPU_v5011p4_r223261** . We recommend a clean install of Integrity and iMX6 SABRE Automotive BSP!

The Green Hills Probe was setup with **Green Hills Probe Firmware prerelease Version 5.3**.

Vivante Graphics Driver

The graphics driver is not part of this release. CGI Studio was integrated and tested with the Vivante Graphics stack included in The Green Hills iMX6 SABRE Automotive BSP mentioned above

Running the Player Demo Application on iMX6 Integrity

Download the Application

To download and debug the application you need a Green Hills probe with firmware 4.4.0 or higher that is configured for your according iMX6 SABRE hardware.

Monolith Application

In MULTI launcher select "Open debugger" and choose the application from your build folder with postfix Monolith. Then hit F5 and connect to target (mpserv connection via Ethernet). Choose "Download to RAM" and choose ID 1. After the application is downloaded, connect an rtserv2 connection directly to the board via Ethernet that allows you to start the Player application. There are three ways to specify the IP address of the board that shall be used for rtserv2:


- as u-boot environment variable (will overrule the other two options)
- In the global_table.c file of the kernel (in your int1104 folder)
- via the command "nc" after the Monolith was started

Loading the asset

The Player demo application has the asset file added by teh linker. It will be loaded to RAM together with the application. As a default, the tunnel asset is linked. This can be changed in the file cgiapp_device_specific_inc.cmake in the CGIApplication/Platform/IntegrityiMX6 folder.

Logging Output and Key Input

Use TeraTerm or another terminal software to connect to the target via COM to receive logging output and use key input.

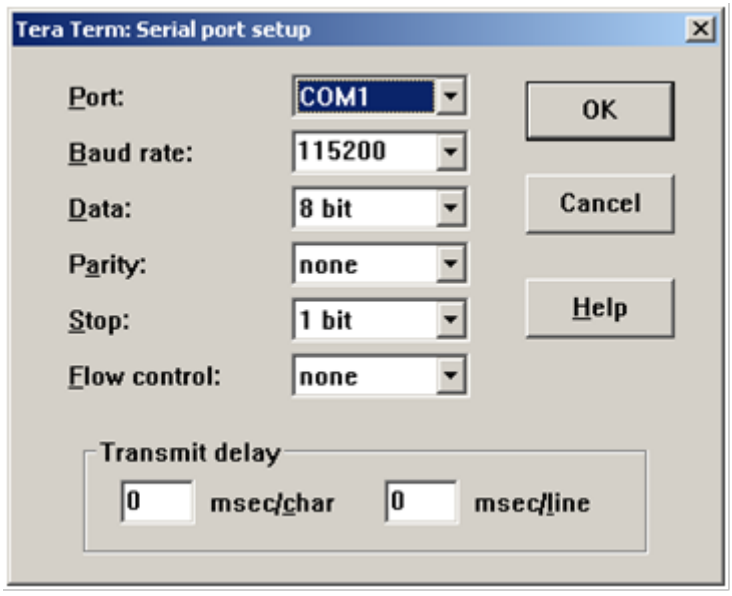
Tera Term: Serial port setup
Port:
COM1
Baud rate:
115200
Data:
8 bit
Parity:
none
Stop:
1 bit
Flow control:
none
OK
Cancel
Help
Transmit delay
0
msec/char
0
msec/line

Building Own Application for iMX6 Integrity

Compile Tool Chain Preparations

Make sure to install the tool chain as described in iMX6 Integrity Prerequisites

---

Generate Makefiles with CMake

For general information about CGI Studio Build System and CMake properties available to configure Candera applications refer to CGI Studio Build System.

To configure and generate makefiles for compiling the Player for IMX6 Integrity, follow below steps:

1. Point CMake to source directory
   - Folder containing top-level "CMakeLists.txt", e.g. \cmake\Candera\Player
2. Point CMake to binary directory
   - May not exist, create folder with CMake if necessary
   - Root directory for generated makefiles / solutions
   - Root directory for build artifacts
3. Configure
   - Specify MinGW Makefiles as generator for the project
   - Specify tool-chain file for cross-compiling
4. Select the toolchain-file from the delivery (adapt for your toolchain installation and application specific needs)
   - \cgi_studio_candera\cmake\toolchain-files\MULTI-toolchain-iMX6-Sabre.txt
5. Adapt the CMake settings if necessary, e.g.:
   - CMAKE_BUILD_TYPE-> Debug or Release
   - Press Configure
6. Press Generate

If the package supports "harfbuzz" as CANDERA_TEXTSHAPER please set this entry appropriately because by default it is set to "ComplexLib". Resume the configuration by pressing “Configure” again.

Building Application

After generating your CMake files, simply navigate to the specified build directory and type "make" with the terminal or console to start the build.

The output monolith file can be found in your build directory's subfolder CGIApplication.

Open this file with the Green Hills MULTI IDE debugger and load it to RAM as described in the previous chapter.

iMX6 Prerequisites

vCompiler

The default shader compiler for iMX6, vCompiler.exe, is part of the VTK (Vivante Tool Kit) provided by Vivante Corporation. The VTK version needs to match exactly the iMX6 hardware version. For further information please check the NXP Semiconductors iMX6 documentation for graphic APIs and driver support information.

After installing vCompiler, please verify that its location has been added to the PATH environment variable. Add manually if necessary.

---

iMX6 Various Device Specific Content

On this page there is various content specific to the iMX6 Device.

iMX6 Specific Best Practices

Description

CGI Studio supports 2D and 3D content creation, composition, and rendering. For iMX6 the Candera graphics engine renders both 2D and 3D content via OpenGL ES API.

This chapter includes design and programming guidelines. It is strongly recommended to follow those hints to utilize *iMX6* in a performance-optimized manner.

Candera Graphics Engine supports both OpenGL ES 2.0 and OpenGL ES 3.0. Selected performance features of OpenGL ES 3.0 are available in OpenGL ES 2.0 as extensions.

Those OpenGL ES 2.0 extensions that are supported by iMX6 and Candera are listed below:

- Binary shader programs: Reduces start up times significantly.
- Direct texture: Vivante extension to access external image and video data.
- Texture compression: Latest ETC2 compression minimizes required memory bandwidth and storage for image data.
- Anisotropic filtering: Increased texture quality for steep angles of view.
- Broad range of buffer formats: Depth 24/32, Stencil 1/4/8, etc.
- 24-bit vertex element index: Support for higher polygon count in 3D models.
- Blending equations minimum and maximum: Enables color clamping.
- Synchronization: Fences support CPU / GPU synchronization.
- And many more.

> Many of those extensions have been introduced in OpenGL ES 3.0 API.

Multi Frequency Rendering

Multi frequency rendering requires either multiple buffered hardware layers (display planes) or software layers. While one layer is rendered and swapped with a higher frequency (e.g. swapping each frame results in 60 FPS), another layer is drawn partially and not swapped unless rendering is complete (e.g. swapping each second frame results in 30 FPS).

When software-layers are used, different update rates of the software-layers can be achieved through multi frequency rendering. It should be considered that the software layers still need to be drawn and blended in every frame and will consume memory bandwidth even when rendering to the software-layer is done at a lower rate.

Special Alpha Blending Techniques

MSAA Blending

The iMX6 platform supports multi-sampling anti-aliasing (MSAA) to avoid jagged edges. MSAA renders multiple samples per pixel and combines them to a final color. This circumstance can be used to render transparent objects in a very performant manner, too. Instead of alpha blending via blend-mode, MSAA can be used to render only a selected percentage of samples per pixel. With that approach blend operations and read/write operations, which are typically required for blending, can be omitted.

Example:
MSAA is defined to accommodate 4 samples per pixel. The alpha value can define the coverage of samples to be written into frame buffer. Coverage of 50% means that half the samples are written, resulting in 2 of 4 samples being rendered. When the samples are finally combined to one pixel, the rendered object contributes only with 2 of 4 samples, which results in 50 % transparency.

Layer Blending

When blending multiple layers a correct alpha value must be written to the layer. By default objects overwrite the current alpha value of a pixel in the layer. In case of layer blending the alpha value of a pixel must be correctly combined with the existing alpha value.

Default alpha blend setting (optimized for performance):

- Source Blend Factor: One
- Destination Blend Factor: Zero

Alpha blend setting for blending multiple layers:

- Source Blend Factor: Inverse Destination Alpha
- Destination Blend Factor: One

Shader

Shader Precision

It is *strongly* recommended to use precision "*high*" in iMX6 shaders.

As medium and low precisions are converted to 32 bit internally, work load for conversion is required, while only saving little amount of memory compared to textures.

Utilization

One strength of iMX6 is the fast shader computation unit. Utilize it best, by computing color values instead of texture fetches. Take care of pixel throughput and bandwidth utilization. Reduction of

pixel coverage in frame-buffer is of utter importance.

Example:
Do not use full-screen backgrounds or big textures. In 2D reduce coverage by tessellated, smaller shaped images or in 3D even better by right-shaped geometry, with least pixel coverage.

Binary Shaders

Candera supports both binary shaders (pre-compiled) and binary shader programs (pre-compiled and linked) on the iMX6 platform. Use them to reduce start-up time significantly.

Textures

Procedural Textures

For iMX6 it is advised to use procedural textures whenever possible in order to both, overcome limited bandwidth and to utilize fast shader units.

Example:
Instead of storing a color gradient in a texture, calculate color in shader related to the texture coordinate given.

Texture Compression

Use **ETC2** texture compression on iMX6. This measure saves bandwidth and memory consumed.

> Textures with color gradients shall not be compressed, due to noticeable decrease in visual appearance.

Consider Tile Size

The iMX6 platform internally uses a tile-based rendering approach. Make sure to align render-area with the optimal tile size of 16x8 pixels. Small intersections of adjacent tiles shall be avoided. Partial coverage of tiles results in wasted performance.

Scene Partitioning

Recommended Partitioning of a 2D Scene

Attempt to reduce dimension of rectangles by omitting areas that are invisible (e.g. same color as background) or occluded (another opaque image is rendered on top of it). This spares pixel coverage.
Furthermore, only those regions need to be redrawn that are not covered by moving needle.
Example: A classical, round tachometer with a needle shall be rendered. The tachometer basically

consists of a tachometer image and a needle image. Except of the tachometer's dial most pixels within tachometer's image have same color as background. Tip: Scissor the tachometer into multiple smaller rectangles to avoid rendering of a huge rectangular image, which renders big portion of same color on top of background. This measure spares pixel coverage. Furthermore, only those clipped tachometer image rectangles must be redrawn that are not covered by moving needle.
Advantages:

- Less pixel coverage.
- Reduced rendering updates.

Recommended Partitioning of a 3D Scene

Use materials instead of textures, no image data required.
Material can be defined directly in shader to reduce number of shader parameters.
Geometry allows occluding exactly those areas visible; no wasted pixels are rendered into framebuffer.
To mitigate aliasing effects (jagged edges), fade out silhouette with transparency.
Advantages:

- Utilize computation strength of iMX6 (shader units), avoid bandwidth utilization (read/write of image data), and spare memory allocation (image data).
- Ease of transitions.
- Advanced visual effects are possible.

Layer Configuration

Layer Configuration

The iMX6 hardware and layer capabilities are reflected in SceneComposer configuration.

Hardware Layers via Planes:
One IPU (Image Processing Unit) blends two planes efficiently with Display Processor (DP).
Restrictions of the planes:

- Background plane must be full-screen
- Foreground (Overlay) plane can have any size and position

Split of content in two layers allows rendering in multiple frequencies. See chapter Multi Frequency Rendering for more details.

Software Layers:
Software Layers are supported via off-screen surfaces. Up to eight software layers can be blended in one single pass. In successive blend-passes even more software layers are possible. The use of software layers is fully integrated in SceneComposer.

> Off-screen surfaces do not support anti-aliasing in OpenGL ES 2.0.

Arbitrary Warping:
Full support for arbitrary warping as required for Head-up display.
CGI Studio supports arbitrary warping for Head-up displays on iMX6. Warping is internally realized via morphed warping mesh.

Candera Device Packages

Supported Device Packages

Candera provides device implementations for following device types:

Name	Description	Possible values
Freescale iMX6		ON/OFF
Other proprietary devices	Can be provided upon special request	ON/OFF

Device-Specific CMake Settings

Name	Description	Possible values
CGIDEVICE_NAME	The name of the device package	Each device package following the Candera device CMake rules provided in the folder <CANDERA_SRC>/CanderaPlatform/Device
CGIDEVICE_TARGET_BUILD	Enable or disable building for target	ON/OFF
CGISTUDIO_PATH_3RD_PARTY	Path to the 3rd party repository location	A string value containing the system file location of 3rd party software, auto-detected by finding possible locations of the name "[ic01_]cgi_studio_3psw"
CGIDEVICE_TARGET_ <CGIDEVICE_NAME> _DRIVER_PATH_INCLUDE	If you don't use the default driver path, the path to the driver include directory can be changed with this setting.	Path to driver include directory (by default set to include directory in 3rd party repository)
CGIDEVICE_TARGET_ <CGIDEVICE_NAME> _DRIVER_PATH_LIB	If you don't use the default driver path, the path to the driver library directory can be changed with this setting.	Path to driver library directory (by default set to library directory in 3rd party repository)

To build a certain device package selected it from the drop-down list of the CMake property

"CGIDEVICE_NAME":

For each device package, either building OpenGL based host simulation or target binaries can be selected via the Boolean CMake property **"*CGIDEVICE_TARGET_BUILD*"**.

The following table illustrates configurations available for the supported device package:

CGIDEVICE_NAME	CGIDEVICE_TARGET_BUILD	PUB_CGI_CPU	PUB_CGI_OS	Default driver path following <CGISTUDIO_PATH_3RD_PARTY> /[src/lib]/
iMX6	Off	X86	Win32	OpenGLES/Win32/OpenGLAdapter
iMX6	On	ARM	Linux	OpenGLES/Linux/iMX6

The CMake properties "PUB_CGI_CPU", "PUB_CGI_OS" usually cannot be configured via the CMake user interface, but are autonomously detected by
the build system. The same applies for the variable "PUB_CGI_COMPILER".

If you don't use the CGI Studio 3rd party software folder structure, the driver paths can be specified in the variables

- CGIDEVICE_TARGET_<CGIDEVICE_NAME>_DRIVER_PATH_INCLUDE and
- CGIDEVICE_TARGET_<CGIDEVICE_NAME >_DRIVER_PATH_LIB

Depending on these properties, either MS Visual Studio solutions or Unix makefiles will be generated into the specified build
directory.

FeatStd Overview

Introduction

For general information and an overview of FeatStd please refer to FeatStd Overview.

See here a typical output of a CMake configuration run of FeatStd:

```
Building project: FeatStd vW.X.Y.Z
---------------------------------
Pre-sets from calling project FeatStd:
    Pre-set include-dirs:
    Pre-set definitions:
---------------------------------
FeatStd external configuration CMake variables:
    BUILD_SHARED_LIBS: OFF
    FEATSTD_3PSW_DIR: D:/cgi-studio/cgi_studio_3psw
    FEATSTD_ADD_BUILD_MODE_DEFINE:
    FEATSTD_USE_PREBUILT_LIBS: OFF
    FEATSTD_PREBUILT_LIB_DIR:
---------------------------------
FeatStd feature settings:
    FEATSTD_IPC_ENABLED=OFF
    FEATSTD_LOG_ENABLED=ON
    FEATSTD_MONITOR_ENABLED=OFF
    FEATSTD_THREADSAFETY_ENABLED=OFF
    FEATSTD_UNITTEST_FRAMEWORK_ENABLED=OFF
    FEATSTD_FRACTIONAL_NUMBER_TYPE=Float
    FEATSTD_MEMORYPOOL_ENABLED=OFF
    FEATSTD_SYSTEM_MEMORY_STATISTIC_ENABLED=OFF
    FEATSTD_SYSTEM_MEMORY_STATISTIC_FILE_AND_LINE_TRACKING_ENABLED=ON
---------------------------------
FeatStd compiler defines:
    ;_CRT_SECURE_NO_WARNINGS;FEATSTD__FILE__=__FILE__
---------------------------------
FeatStd configuration file:
    Generated to D:/cgi-studio/build/gensrc/FeatStd/Config.h
---------------------------------
Exported FeatStd CMake variables:
    FEATSTD_EXPORTED_CMAKE_DIR: D:/cgi-studio/featstd/cmake
    FEATSTD_EXPORTED_DEFINITIONS: -D_CRT_SECURE_NO_WARNINGS;-DFEATSTD__FILE__=__FILE__
    FEATSTD_EXPORTED_INCLUDE_DIRECTORIES: D:/cgi-studio/featstd/src;D:/cgi-studio/build/gensrc
    FEATSTD_EXPORTED_LIB_NAME: FeatStd_x86_Win32_iMX6_Simulation_MSVC
    FEATSTD_EXPORTED_LINK_DIRECTORIES:
    FEATSTD_EXPORTED_LINK_LIBRARIES: winmm;Ws2_32;FeatStd_x86_Win32_iMX6_Simulation_MSVC
    FEATSTD_EXPORTED_OS: Win32
```


```
    FEATSTD_EXPORTED_ROOT_DIR: D:/cgi-studio/featstd
```

Compile Shaders

Shader compilation is triggered in the following situations:

1. During shader editing, if requested via menu item "Shader" > "Compile Shader" or by pressing F7 key, the selected shader or shader program will be compiled using the platform's shader compiler.
2. During scene editing, when the scene dependencies are generated, the shaders will be compiled using an internal shader compiler (so called "builtin://DefaultShaderCompiler").
3. During asset generation, depending on the selected shader compiler type, the shaders will be compiled using platform's shader compiler (Target) or internal shader compiler (Simulation).

The compilation result can be seen in the "Problems Browser" panel. For further information please refer to section Problems Browser.

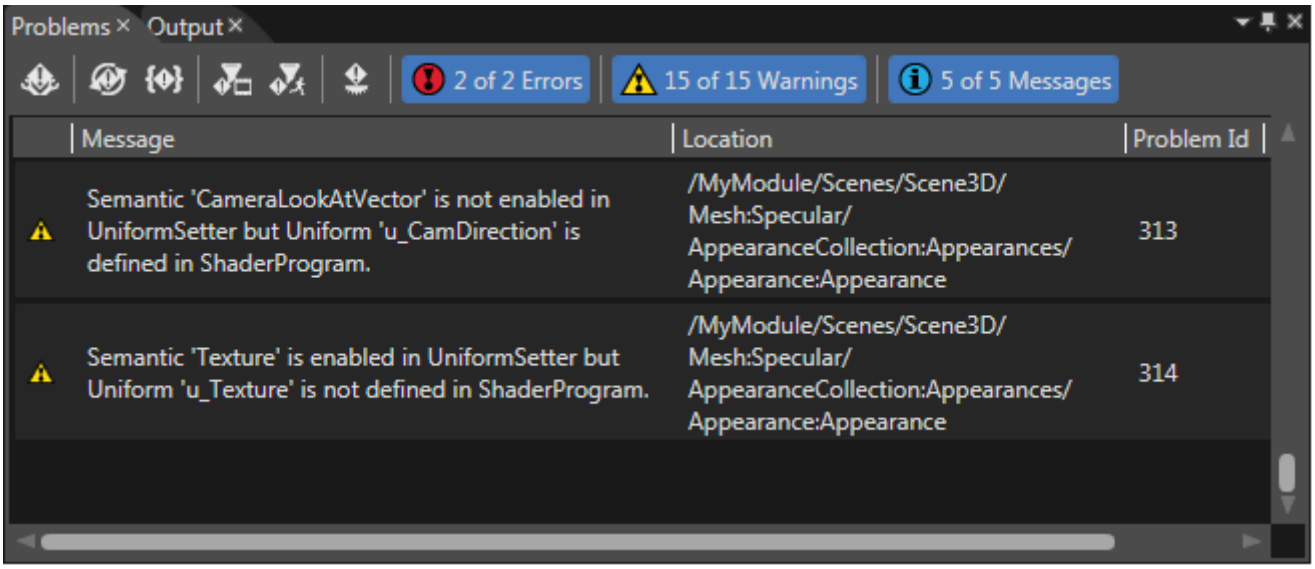


After successful shader compilation, a regarding message is displayed.

---

iMX6 Shader Compiler

iMX6ShaderCompiler provides support for exporting compiled (and/or linked) shaders to the asset file.

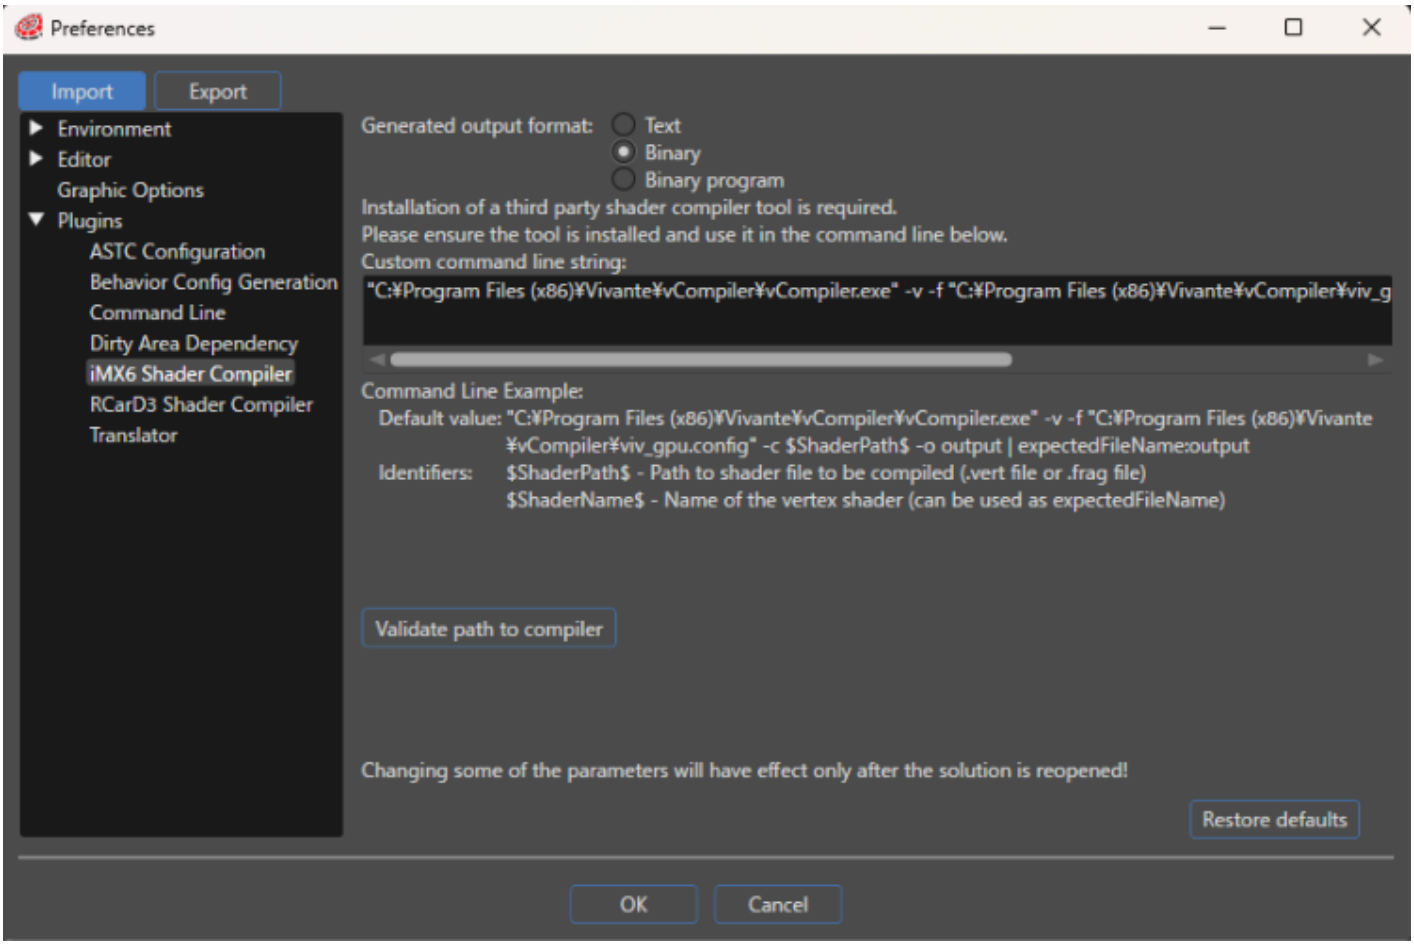

It can be configured from File/Preferences section and provides some parameters which can be changed in order to achieve the desired behavior:

1. Output type:

- a. Binary - exports compiled shaders (separate compiled vertex and fragment shaders)
- b. Binary program - exports a linked shader pair (in the asset file, the vertex shader will contain the compiled and linked pair and the fragment shader will contain an empty buffer)
- c. Text - exports the source code of the shaders (separate source code for vertex and fragment shaders)

2. Command line - a configurable string of the following format:

```
<path_to_executable_file> [arg0] [arg1] [arg2] ... [argN] | expectedFileName:<output_file_name>
```

- a. The path to executable to be run in order to generate the compiled/linked shaders along. The executable itself can be specified alone (no path) if the path to it's parent directory is found in the system environment path. Paths which cointain spaces need to be delimited by double quotes. Example: "C:\My Projects\Vivante\vCompiler.exe"
  Note:
  If vCompiler.exe is not available, in order to avoid an error related to the executable file missing, for host assets the output format for the generated shaders can be set

to text.

For more information related to vCompiler please check vCompiler

- b. The arguments (parameters to be passed to execution). Some special parameters which identify the current processed shader can be specified (they are detailed below). Examples: $ShaderPath$, $VsPath$
- c. The expected file name specifier: specifies the name (without extension) of the output file and is separated from the rest of the command (a and b) by a pipe '|'. iMX6 shader compiler expects output files with the following extensions: i.) .vgcSL - compiled vertex shader (applies for Binary output only) ii.) .pgcSL - compiled fragment shader (applies for Binary output only) iii.) .gcPGM - compiled and linked shader pair (applies for Binary program output only)

Example: For binary output, "expectedFileName:output" - requires that a compiled vertex shader file will be named output.vgcSL and a compiled fragment shader file will be named output.pgcSL

The command line for "Binary" output is a little bit different than the one for "Binary program" output.

Binary output command line: this command line is invoked separately for each vertex and fragments shader.

```
Example: "C:\Vivante\vCompiler.exe" -s4 -c $ShaderPath$ -o output | expectedFileName:output
```

Identifiers

- $ShaderPath$ - can be used as argument only and this identifier will be replaced with actual path to shader file when the command is invoked
- $ShaderName$ - can be used as expectedFileName specifier and will be replaced with the shader name (without extension) when the command is invoked

Binary program output command line:

This command is invoked for a shader pair (both vertex and fragment shader)

```
Example: "C:\Vivante\vCompiler.exe" -v $VsPath$ $FsPath$ -o output | expectedFileName:output
```

Identifiers

- $VsPath$ - can be used as argument only and will be replaced with actual path to vertex shader file when the command is invoked
- $FsPath$ - can be used as argument only and will be replaced with actual path to fragment shader file when the command is invoked
- $VsName$ - can be used as expectedFileName specifier and will be replaced with the vertex shader name (without extension) when the command is invoked

---

Render Targets

Render Targets Device Capabilities

Device Capabilities

Following is an overview about what kind of render targets are supported on which device:

Device	Number of Displays Supported	Types of Layers Supported	Unit Types
iMX6	4	1 color layer	Mixed2D3DDisplayTarget: Candera::iMX6WindowSurfaceRenderTarget Mixed2D3DOffscreenTarget: Candera::iMX6FrameBufferRenderTarget Candera::SoftwareLayer